

<b>Company Name</b>	BONSAI JACK LLC	<b>Calibration Date</b>	1-4-19
<b>Address</b>	17940 BALFOUR TERRACE	<b>Next Calibration Due Date</b>	NEW
<b>City/State/Zip</b>	FORT MYERS, FL 33913	<b>Service Report #</b>	1215W

THE WEIGHING SYSTEM LISTED BELOW HAS BEEN CALIBRATED USING TEST STANDARDS TRACEABLE TO THE NATIONAL INSTITUTE OF STANDARDS AND TECHNOLOGY (NIST)

**EQUIPMENT INFORMATION**

<b>Scale Type</b>	BENCH	<b>Manufacturer:</b>	DIGIWEIGH	<b>Max Capacity:</b>	30 LB
<b>Customer ID#</b>		<b>Model:</b>	DWP 30 PC	<b>Min Division:</b>	.01 LB
<b>Location</b>		<b>Serial #:</b>	160	<b>Units / Class:</b>	III 12-067

**TEST RESULTS**

**AS FOUND:**

Test Load	Scale Indication	Error
0	0	0
1	1	0
5	5	0
10	10	0
20	20	0
30	30	0

**AS LEFT:**

Test Load	Scale Indication	Error
0	0	0
1	1	0
5	5	0
10	10	0
20	20	0
30	30	0

**TOLERANCE:**

Tolerance Limit	
Low	High
0	0
99	100
4.99	5.01
9.98	10.02
19.98	20.02
29.97	30.03


**CORNER TEST:**

<b>Corner 1</b>	5
<b>Corner 2</b>	5
<b>Corner 3</b>	5
<b>Corner 4</b>	5

**Indicator**

1	2
4	3

Pass  Fail

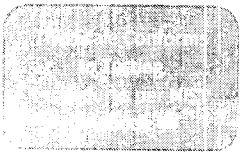

Yes  No

CLASS III Maintenance TOLERANCE	
Acceptance Tolerance = 1/2 of Maintenance Tolerance	
0-500 Division Range	= 1 Divisions Allowable Error
501-2000 Division Range	= 2 Divisions Allowable Error
2001-4000 Division Range	= 3 Divisions Allowable Error
4001-5000 Division Range	= 5 Divisions Allowable Error
Max Division Range = Capacity / Min Division	
Example: 100 / .02 = 5000 Max Divisions	
Tolerance Limit = Test Load / Min Division	
Example: 25 / .02 = 1250 Division Range (Allowable Error = 2 divisions or + -.04)	

**REPEATABILITY TEST**

Test Weight	Reading 1	Zero	Reading 2	Zero	Reading 3	Zero
10	10	0	10	0	10	0

Comments / Observations:

SCALE IS WEIGHING WITHIN TOLERANCE AFTER INITIAL CALIBRATION

**TEST STANDARDS USED: (Weight or Kit Serial Numbers)**


Certification Performed By: WAYNE M.